Assembly Instructions
Freya Ceiling Light # CFRY1763

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

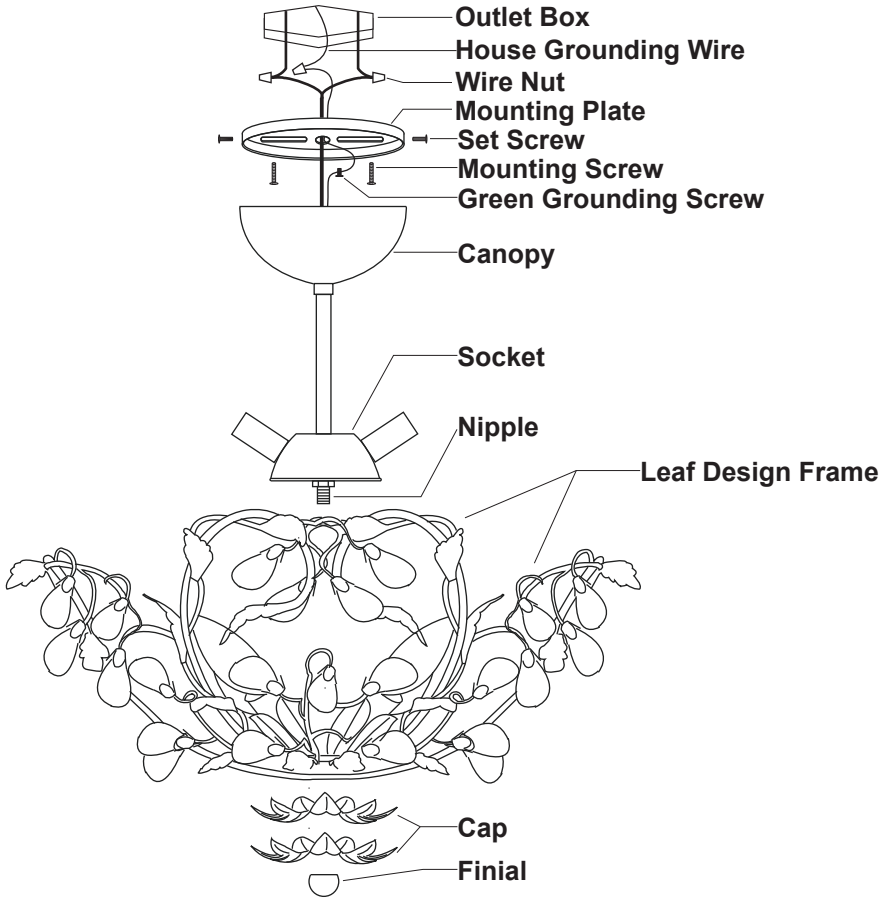

1. Unscrew the set screws from the mounting plate, then put them aside.
2. Attach the mounting plate to the outlet box by using two mounting screws.
3. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections with wire nuts:
   ---The black wire from the fixture to the black wire from the power source.
   ---The white wire from the fixture to the white wire from the power source.
   ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.
   Carefully put the wires back into the outlet box.
4. Attach the canopy to the mounting plate by aligning the holes, then secure it with the the set screws.
5. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
6. Attach the leaf design frame and two caps to the sokcet base by inserting the nipple, then secure them with the finial.
7. Turn on the power at the main fuse or circuit breaker box.